

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual – Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energieeffektivitātes

Table with 12 columns: PF (FABER 325.0652.937 P2319), IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include technical specifications like AEchood (34.0 kWh/a), EEC (A++), FDEhood (37.6), FDEC (A), LEhood (64 lux/Watt), LEC (A), GFEhood (75.1 %), GFEC (C), Qmin (270 m3/h), Qmax (450 m3/h), Qboost (780 m3/h), SPEmin (48 db), SPEmax (60 db), SPEboost (71 db), P0 (0.49 Watt), Ps (N/A Watt), F (0.6), EElhood (34.7), Qbep (395.0 m3/h), Pbp (507 Pa), Qmax (780.0 m3/h), Wbep (148.0 W), WL (2.2 W), Emiddle (140), Lwa (60 dBA), and various efficiency tips and standards.

